

ROLAND

Model	タイプ	互換性	ゲイン・セッティング	コメント
PD-105	Dual-zone mesh drum pad	Yes		
PD-85	Dual-zone rubber pad	Yes	30	Set rim to "Switch"
PD-8	Dual-zone rubber drum pad	Yes	30	Set rim to "Switch"
PDX-6	Mesh head pad	Yes	30	Head and rim piezo
PDX-8	Mesh head pad	Yes	30	Head and rim piezo
TD-4 Kit HH pedal	Hi-hat pedal	Yes	20	Must be calibrated
HD-1 / TD-4 Kit	Mesh head snare pad	Yes	30 C / 45 R	Piezo / piezo settings
KD-85	Kick drum pad	Yes	30	
KD-8	Kick drum pad	Yes	40	
FD-8	Hi-hat pedal	Yes	20	Must be calibrated
CY-8	Single-zone cymbal pad	Yes	20	
CY-12R	Triple-zone cymbal pad	Yes	20	Set bell to "Switch"
CD-14C	Triple-zone cymbal pad	Semi	30	Ride 1: Single-zone bow, no choke Ride 2: Single-zone bow, no bell, choke OK Crash: Single-zone bow, choke OK
CY-15R	Triple-zone cymbal pad	Yes	30	Set bell to "Switch"
CY-12C	Triple-zone cymbal pad	Yes	30	Ride input 1
VH-11	Hi-hat pad & control pedal	Yes	20	Single-zone; unable to trigger heel splash

YAMAHA

Model	タイプ	互換性	ゲイン・セッティング	コメント
TP65	Single-zone rubber drum pad	Yes	40	
TP65S	Dual-zone rubber drum pad	Yes	35 C	Set rim to "Switch"
TP100	Dual-zone rubber drum pad	Yes	40	Set rim to "Switch"
TP120SD	Triple-zone snare pad	Yes	30	Dual-zone only; set rim to "Switch"
PCY65	Single-zone cymbal pad	Yes	30	
PCY135	Triple-zone cymbal pad	Semi	20	Ride 1: Bell only Ride 2: Edge plays on bell; bell actuates choke; bow OK Crash: Single-zone; no choke
PCY-155	Cymbal pad	Semi	45	Ride input 1: Bell/bow; set bell to "switch"; no choke Ride input 2: Bell on bow; no choke
HH65	Hi-hat pedal	No		
KP65	Kick pad	Yes	20	Works only on Through input